



US104-01C MIMOSA OUTDOOR SLIPCOVERED DINING CHAIR

OVERALL: W23 D28 H42
SEAT HEIGHT: 19
BACK RAIL HEIGHT: 25

INSIDE: W20 D19 H22
ARM HEIGHT: 24

STANDARD WITH

Topstitching
Outdoor Casters
Cushion - Outdoor

The casters can be omitted and replaced with 2.5" wooden feet in LEE and Coveralls and 2.25" plastic in Uncovered for no charge.